

ALPHABETICAL INDEX

(In Section Order)

Description	Page	Plate	Description	Page	Plate	Description	Page	Plate
ENGINE	1-18		ENGINE — continued			GEARBOX — continued		
Air cleaner	17	H	Oil pressure relief valve	3	A	Countershaft	24	M
Big end bearings	7	B	Oil pump	11	D	Countershaft gears	24	M
Camshaft	6	B	Oil pump drive shaft	8	B	Extension	21	L
Carburettor	14, 15	G	Oil pump seal housing, rear	2	A	Gear train	23	M
Carburettor connecting rod	16	G	Oil sump	3	A	Mainshaft	23	M
Carburettor float	15	G	Petrol pump	13	F	Mainshaft bearing	23	M
Carburettor float chamber	15	G	Piston	7	B	Mainshaft flange	23	M
Carburettor float needle	15	G	Piston rings	7	B	Mainshaft gears	23	M
Carburettor fuel pipe	16	A	Push rod	4	A	Reverse actuator	21	L
Carburettor jet	15	G	Rear engine plate	3	A	Reverse actuator shaft	21	L
Carburettor jet needle	14	G	Rockers	5	A	Reverse gear	24	M
Carburettor throttle lever	14	G	Rocker cover	5	A	Reverse gear spindle	24	M
Combustion head	3	A	Rocker pedestal	5	A	Reverse operating lever	24	M
Combustion head gasket	4	A	Rocker shaft	5	A	Selector forks	21	L
Connecting rod	7	B	Rocker springs	5	A	Selector shafts	21	L
Connecting rod bearings	7	B	Sparking plug	18		Slave cylinder boss	20	L
Crankshaft	6	B	Thermostat	10	C	Speedo driven gear	21	L
Crankshaft bearings	6	B	Throttle lever	14	G	Top cover	21	L
Crankshaft chain wheel	6	B	Timing chain	6	B			
Cylinder block	1	A	Timing chain tensioner	7	B	GEAR SHIFT		
Cylinder liner	2	A	Timing cover	6	B	MECHANISM	25	
Decarbonising gasket set	1		Valves	4	A	Gear lever	25	N
Dipstick	3	A	Valve springs	4	A	Gear lever shaft	25	N
Distributor drive shaft	7	B	Valve tappet	4	A	Gear lever shaft coupling	25	N
Distributor pedestal	8	B	Water elbow	10	C	Grommet	25	N
Dynamo mounting	18	J	Water pump	9	C	Hand lever	25	N
Dynamo pulley	18	J	Water pump bearing housing	9	C	Hand lever knob	25	N
Emission control valve	12	E	Water pump repair kit	9		Operating shaft	25	N
Engine gasket set	1					Top cover extension	25	N
Exhaust manifold	12	E	CLUTCH	19				
Exhaust valve	4	A	Cover assembly	19	K	ENGINE		
Fan	9	C	Driven plate	19	K	MOUNTING	26	P
Flywheel	6	B	Slave cylinder	19	K	Front engine mounting	26	P
Front engine mounting plate	3	A	Slave cylinder service kit	19		Rear engine mounting	26	P
Front sealing block	2	A				Rear engine mounting platform	26	P
Inlet manifold	12	E	GEARBOX	20-24				
Inlet valve	4	A	Attachment details	22		CHASSIS FRAME	27-28	Q
Main bearings	6	B	Case	20	L			
Manifolds	12	E	Clutch disengaging lever	20	L	FRONT		
Manifold gasket	12	E	Clutch housing and front end cover	20	L	SUSPENSION	29-31	
Manifold heater pipes	12	E	Clutch throw-out bearing	20	L	Bottom trunnion	30	R
Oil filter	11	D	Clutch throw-out sleeve	20	L	Bottom trunnion dirt seal	30	R
Oil pressure indicator switch	2	A	Clutch throw-out sleeve	20	L	Bottom trunnion oil seal	30	R
			Constant pinion shaft	24	M	Front damper	31	R
			Constant pinion shaft bearing	24	M	Front damper attachment details	31	R

ALPHABETICAL INDEX

(In Section Order)

Description	Page	Plate	Description	Page	Plate	Description	Page	Plate
FRONT SUSPENSION — continued			STEERING — continued			BRAKES — continued		
Front road spring	31	R	Rack and pinion	40, 41	W	Rear brake operating lever	52	AB
Hub	30	R	Wheel	40	W	Rear brake shoe	52	AB
Hub bearing	29, 30	R	ACCELERATION CONTROL			Rear brake wheel cylinder	52	AB
Lower wishbone assembly	30	R	Fulcrum bracket	42		RADIATOR		
Lower wishbone fulcrum bracket	30	R	Lever	42	X	Air deflector board	53	
Stub axle	29	R	Operating rod	42	X	Block	53	AC
Stub axle oil seal	29	R	Pedal	42	X	Cradle	53	AC
Tie rod lever	30	R	CLUTCH AND BRAKE PEDALS			Filler cap	53	AC
Top wishbone arm	29	R	Brake pedal	43		Hose	53	AC
Upper ball joint	29	R	Clutch pedal	43	Y	Overflow bottle	53	AC
Vertical link	29	R	Dust cover	43	Y	Stay	53	AC
ANTI-ROLL BAR			Mounting bracket	43	Y	EXHAUST SYSTEM		
	32	S	Pedal pad	43	Y	Front pipe	54	
REAR AXLE			MASTER CYLINDER			Front silencer and intermediate pipe	54	AD
Axle casing	33-36	T		44-46	Y	Mounting strip	54	AD
Crown wheel and pinion	33	T	HYDRAULIC PIPES			Rear silencer and tail pipe	54	AD
Differential bearing	33	T	Brake pipes	47, 48		PETROL SYSTEM		
Differential casing	33	T	Clutch pipes	47	Z	Filler cap	55	
Differential gears	34	T	Connecting hose	47	Z	Gauge unit	55	AE
Hub bearings	35, 36	T	Hose mounting bracket	47	Z	Pipes	55	AE
Hub, inner	35	T	Pipe clips	47	Z	Tank	55	AE
Hub, outer	33	T	HANDBRAKE			SERVICE KIT		
Hypoid housing	33	T	Cable	49, 50		Gasket set	56	
Inner axle shaft	35	T	Compensating sector	49	AA	Owners handbook	56	
Mounting plate	33	T	Lever	50	AA	Service kits	56	
Mounting rubber	33	T	Pawl	49	AA	TOOLS		
Outer axle shaft	33	T	Relay lever	50	AA	Jack	56	
REAR SUSPENSION			Spring, pawl release	49	AA	ELECTRICAL		
Damper	37, 38		Spring, pull-off	50	AA	Battery	57-74	
Pivot bracket	38	U	BRAKES			Body harness	70	
Radius arm	37	U	Front brake caliper	51, 52		Choke control cables	74	AN
Road spring	37	U	Front brake dust shield	51	AB	Control box	70	AM
Vertical link	37	U	Front brake friction disc	51	AB	Distributor	57	AF
PROPELLOR SHAFT			Front brake lining pad	51	AB	Distributor cap	57	AF
	39	V	Rear brake	51	AB	Distributor condenser	57	AF
ROAD WHEELS			Rear brake adjuster unit	51	AB	Distributor contact set	57	AF
	39	V	Rear brake back plate	51	AB	Dynamo	58	AG
STEERING			Rear brake drum	52	AB	Dynamo armature	58	AG
Column, lower	40, 41		BRAKES			Dynamo brush set	58	AG
Column, upper	40	W	Front brake caliper	51	AB			
Flexible joint	40	W	Front brake dust shield	51	AB			
Inner ball joint	41	W	Front brake friction disc	51	AB			
Mounting block	41	W	Front brake lining pad	51	AB			
Outer ball joint	41	W	Rear brake	51	AB			

ALPHABETICAL INDEX

(In Section Order)

Description	Page	Plate	Description	Page	Plate	Description	Page	Plate
ELECTRICAL — continued			ELECTRICAL — continued			BODY AND FITTINGS — continued		
Engine leads	71		Starter motor brush			Door outside handle	91	AT
Flasher switch	61	AH	set	58	AG	Door private lock	91	AT
Flasher unit	60	AH	Starter solenoid			Door remote control		
Flasher warning light	73	AN	switch	59	AG	handle	90	AT
Front flasher/side lamp	67	AK	Stop light switch	70	AM	Door remote control mechanism	90	AT
Front flasher lamp bulb	67	AK	Stop/tail reflex lamp	68	AL	Door sealing rubber	91	AT
Front flasher lamp lens	67	AK	Stop/tail reflex lamp bulb	68	AL	Door trim pads	91, 92	AT
Fuse	70		Stop/tail reflex lamp lens	68	AL	Door waist weatherstrip	87	AT
Fuel gauge	72	AN	Temperature gauge	72	AN	Door window regulator	88, 89	AT
Headlamp	65, 66	AK	Temperature transmitter	72	AN	Door window regulator channel	87	AT
Headlamp bulb	65, 66	AK	Windscreen wiper arm	63, 64AJ,AJS		Door window regulator handle	89	AT
Headlamp light unit	65, 66	AK	Windscreen wiper blade	63, 64AJ,AJS		Engine bay valance	86	AS
Heater switch	74	AN	Windscreen wiper motor	62-64AJ,AJS		Facia ash tray	96	AV
Horn	60	AH	Windscreen wiper switch	73	AN	Facia crash pad	96	AV
Horn push	60	AH	Windscreen wiper wheelbox	63	AJ	Facia facings	97	
Ignition and starter switch	73	AN				Facia panel	96	AV
Ignition coil	57	AF	BODY AND FITTINGS	75-132		Facia support bracket	96	AP
Lighting switch	61	AH	Air box	81	AR	Floor felts	119	BD
Main harness	70		'A' post panel	80	AR	Floor panels	78, 79	AQ
Master lighting switch	73	AN	'A' post panel, lower	82	AR	Footrest	79	AQ
Rear flasher lamp	68	AL	'B' post panel	81	AR	Front bumper	108	AZ
Rear flasher lamp bulb	68	AL	'B' post trim pad	119	BD	Front bumper overrider	108	AZ
Rear flasher lamp lens	68	AL	Battery box	80	AR	Front bumper support bracket	108	AZ
Rear number plate lamp	69	AL	Body mouldings	111	BA	Front seat	123-132	BE, BES
Rear number plate lamp bulb	69	AL	Body mounting details	77	AP	Front seat cushion cover	125, 131	BE, BES
Rear number plate lamp lens	69	AL	Body complete	75, 76		Front seat frame	124, 128	BE, BES
Rear number plate lamp plinth	69	AL	Body shell	76		Front seat slides	126, 132	BE, BES
Reverse lamp	68	AL	Bonnet	83	AS	Front seat squab cover	124, 125, 128	BE, BES
Reverse lamp bulb	68	AL	Bonnet catch	85	AS	Front valance	83	AS
Reverse lamp lens	68	AL	Bonnet letters	84	AS	Front wheelarch, inner	83	AS
Reverse light switch	71	AM	Bonnet link	84	AS	Front wheelarch, outer	83	AS
Revolution counter	72	AN	Bonnet locating plate	80	AR	Front wing	83	AS
Revolution counter cable	72	AN	Bonnet locating plate	80	AR	Frontal grille	85	AS
Side/flasher lamp	67	AK	Bonnet hinge bracket	83, 84	AS	Frontal grille strut	83	AS
Sidelamp bulb	67	AK	Bonnet top assembly	83	AS	Gearbox cover	78	AQ
Sidelamp lens	67	AK	Bonnet tube assembly	83	AS	Handbrake millboard	79	AQ
Side marker lamp	67, 68	AK	Carpet	118, 119	BD	Hard top backlight glass	116	BC
Speedometer	72	AN	Dash shelf panel	80	AR	Hard top backlight glazing rubber	116	BC
Speedometer cable	72	AN	Dash side panel	80	AR	Hard top cantrail sealing rubber	117	BC
Starter and ignition switch	73	AN	Door	87	AT			
Starter motor	58	AG	Door check arm	91	AT			
Starter motor armature	58	AG	Door glass	87	AT			
			Door glass channel	87	AT			
			Door glass stop bracket	89	AT			
			Door hinge	87	AT			
			Door lock	89	AT			
			Door lock striker	89, 90	AT			

ALPHABETICAL INDEX

(In Section Order)

Description	Page	Plate	Description	Page	Plate	Description	Page	Plate
BODY AND FITTINGS — continued			BODY AND FITTINGS — continued			OVERDRIVE — continued		
Hard top kit	116, 117	BC	Spare wheel cover	107	AY	Planet carrier	137	BG
Hard top roof	116	BC	Steering column clamp	109	AV	Propellor shaft	136	BF
Hard top tie bar	117	BC	Steering column clamp mounting bracket	109	AV	Rear casing	138	BG
Hard top weatherseal	117	BC	Steering column cowl	99	AV	Relief valve kit	136	BG
Heater controls	101, 103	AW, AWS	Steering column support bracket	100	AV	Solenoid	138	BG
Heater demister nozzle	102, 104	AW, AWS	Steering column tie bar	99		Speedometer cable	136	BF
Heater demister outlet	102	AW	Sun visor	94, 95	AU	Speedometer drive	138	BG
Heater hose	101, 104	AW, AWS	Tonneau cover	110	BA	Sunwheel	137	BG
Heater kit	101		Trunk lid	106	AY	ALTERNATOR INSTALLATION 139-141		
Heater pipes	101, 103	AW, AWS	Trunk lid handle	106	AY	Alternator	139	BH
Heater switch	101, 103	AW, AWS	Trunk lid hinge	106	AY	Alternator attachment details	140	BJ
Heater unit	101, 103	AW, AWS	Trunk lid letters	107	AY	Alternator instruments	141	BK
Heater water valve	101, 103	AW, AWS	Trunk lid lock	106	AY	ACCESSORIES 142-146		
Hood	112, 115	BB	Trunk lid nameplate	107	AY	Anti-mist panel	145	
Hood frame	112, 113	BB	Trunk lid reinforcement	106	AY	Bonnet lock kit	142	
Hood stowage cover	121	BD	Trunk lid seal	107	AY	Brake fluid	145	
Inner wheelarch panels	78	AQ	Trunk lid stay	107	AY	Cigarette lighter	145	
Interior mirror	94	AU	Wheelarch cover	120	BD	Continental touring kit	142	
Instrument panel	97	AV	Windscreen frame	93	AU	Defroster	145	
Jack stowage bracket	109	AZ	Windscreen glass	93	AU	Emergency windscreen	144	
Main floor panel	78	AQ	Windscreen glazing rubber	93	AU	Engine oil cooler kit	145	
Outer wheelarch panel	78	AQ	Windscreen washer container	105	AX	Fire extinguisher	145	
Parcel tray	96	AV	Windscreen washer jet	105	AX	Fog lamp	143	
Radio aperture cover plate	98	AV	Windscreen washer plunger	105	AX	Fuel filter	143	
Rear compartment trim pad	121	BD	Windscreen washer tubing	105	AX	Hard top to soft top conversion kit	144	
Rear corner bumper	108	AZ	MISCELLANEOUS			Luggage grid	142	
Rear corner bumper spring bar	108	AZ	BODY DETAILS 133			Mud flap kit	145	
Rear deck panel	81	AR	Blanking plugs	133		Nave plate wheel trim	143	
Rear quarter trim pad	120	BD	Grommets	133		Paint, touch-in	143	
Rear seat pan panel	78	AQ	Wing mirror	133		Petrol filler locking cap	144	
Rear valance	78	AQ	OVERDRIVE 134-138			Power stop servo kit	144	
Rear wing inner panel	81	AR	Annulus	137	BG	Sparkling plug	144	
Rear wing outer panel	81	AR	Clutch sliding member	137	BG	Spot lamp	143	
Rubber mats	118		Gearbox	135		Steering wheel glove	144	
Safety harness	119	BD	Gearbox harness	135	BF	Towing attachment kit	144	
Safety harness attachment details	119	BD	Oil pump plunger	136	BG	Wheel finisher	143	
Sill outer panel	82	AR	Overdrive harness	135	BF	Wing mirror	142	
			Overdrive switch	135	BF	Wood rimmed steering wheel	142	
			Overdrive unit	134, 136	BF			